



In-Building Coverage
Eliminates Interference Issues for
Mobile use in Healthcare



In-Building Coverage

Eliminates Interference Issues

for Mobile use in Healthcare



Healthcare providers continually want to improve the speed, accuracy, and efficiency of their services, and most are increasing their adoption of wireless networks for medical telemetry, electronic records, and other applications. This trend is accelerating with the US Federal Government's recent initiative to move the industry more quickly toward universal use of electronic health (e-health) records. At the same time, mobile phones have become the communications standard for patients, visitors, staff, and physicians alike. Hospitals teem with wireless signals, and which causes legitimate concerns about interference impacting the operation of critical care devices. Some hospitals and clinics have banned the use of mobile phones by visitors or patients. Ironically, by implementing in-building distributed antenna systems, hospitals and clinics can eliminate concerns about mobile phone interference with other wireless medical information systems while providing vastly superior voice and data service for doctors, patients, and staff.

Wireless, wireless everywhere

Wireless networks provide healthcare facilities with the ability to monitor patients, provide services, and track the locations of equipment as never before. Within the past ten years, medical products companies have introduced devices and software for such diverse applications as monitoring patient vital signs (both inside and outside clinics and hospitals), charting, issuing prescriptions, billing, appointment queuing, and inventory management. Many of these systems use some form of 802.11 (Wi-Fi) radio connectivity, and that connectivity must be maintained at all times.

In addition, mobile phones have become an important part of many healthcare operations. Smart phones have largely replaced pagers as a primary means of communicating with physicians, quickening care response time, and some organizations are rolling out mobile patient information systems that run on mobile phone platforms over wireless networks. As carriers roll out 3G and 4G broadband wireless services, the increase in connection speed will foster new mobile applications.

There are two key problems facing hospital and clinical IT and communications managers seeking to implement or expand mobile applications:

1. **Interference** – None of the wireless devices can interfere with any of the others. Information must be secure and reliable.
2. **Access** – The wireless networks must provide coverage throughout the every area where service is desired. Hospitals in particular tend to have thick walls with an above-average density of individual rooms, and it is often difficult for wireless signals to penetrate walls, either from internal wireless access points or from outdoor cellular towers. This is particularly true in medical imagery areas where walls are lined to mitigate radiation exposure. Data driven 3G and 4G wireless services often use higher frequencies that have even more difficulty penetrating walls or traveling long distances. They also require higher data rates and support for the exponential growth in mobile data applications.

Unfortunately, meeting both of these challenges at the same time has been difficult in the past due to the nature of wireless and mobile devices.

Poor coverage aggravates interference issues

To understand why mobile phones may interfere with wireless medical equipment, we need to touch on RF power levels and electromagnetic field (E-field) strength. Industry standards require that all medical equipment must operate properly when exposed to 3 V/m (volts per meter) of applied E-field power. Typically, medical equipment is designed to operate properly under the higher exposure level of 10 V/m. This maximum exposure level is called the immunity level – the level of exposure the device can tolerate before its communication may be disrupted by interference.

Mobile phones emit varying amounts of E-field power (measured in Watts (W) or milliwatts (mW), depending on the transmit power of the specific phone and the distance between the mobile phone and the medical equipment. Although a mobile phone's transmit power varies somewhat depending on the underlying wireless network technology in use (i.e., CDMA, GSM, UMTS, etc.), most mobile phones emit as much as 1 W of power. At this rate, RF transmissions from a mobile phone can reach the 3 V/m immunity level for medical equipment when the phone is less than ten feet from the medical device. As a precaution against such interference, many hospitals have banned the use of mobile phones near medical equipment, and some hospitals discourage all mobile phone use by visitors and patients.

Using DAS to reduce interference

Given the popularity of mobile phones and their benefits to patient care, healthcare facilities must find a better way to accommodate mobile phone use by doctors, staff, patients and visitors, and that means finding ways to eliminate the threat of interference that mobile phones pose for wireless medical devices.

There are two factors that determine a phone's E-field power:

1. **The distance from the phone to the device** – Like other types of radio energy, mobile E-field signals attenuate over any given distance, so the farther a phone is from a device, the lower the power of the E-field when it reaches the device.
2. **The strength of the signal between the phone and the nearest mobile device antenna** – Most phones automatically increase their output power as needed to ensure the strongest possible connection, but they also reduce power output whenever possible (if there's a strong signal nearby) to improve battery life.


Since the growing use of both mobile phones and wireless medical devices will make it increasingly difficult for healthcare facilities to control the distance between mobile phones and medical devices, it's logical to address the interference challenge by reducing mobile phone output power. Although mobile phones may transmit up to 1 W, they can produce as little as 3 mW of power if there is strong signal source nearby. Happily, 3mW is also the immunity level for wireless medical devices.

To reduce mobile phone output power and mitigate interference concerns, many hospitals and clinics have deployed distributed antenna systems (DAS). A DAS is composed of distributed amplifier and antenna pairs placed at various locations throughout the building. These units connect back through cabling to a central distribution hub that, in turn, connects to the serving base station.

A DAS takes a wireless service provider's signal and distributes it throughout a building. This brings the signal closer to any prospective mobile user, provides strong and uniform coverage throughout the building, and allows mobile phones to operate at minimum power levels. In addition, the use of DAS systems also allows the creation of "micro-cells" inside of a building that can support large numbers of users without impacting the capacity of the outdoor mobile network.

However, the DAS itself is a new source of RF emissions, so it is important to also consider the E-field strength produced by the DAS. Mobile network architects should check the rated output power of any DAS to ensure that it is not high enough to cause interference. Output power is measured as the output power of one RAU times the number of RAUs, so if one RAU outputs 1 mW, the overall output is 10 mW.

In addition to the overall characteristics of the DAS, output power can be impacted by the type of antenna used. For example, assuming that the RAUs transmit their signals through a standard 3 dBi omni-directional dipole antenna, the E-field in the direction of maximum antenna gain would drop below the 3 V/m immunity level at a distance of six inches or more. RAUs are normally mounted in the ceilings, so the distance between an RAU and any medical equipment will never be less than six inches and the DAS itself will never cause interference to medical equipment.

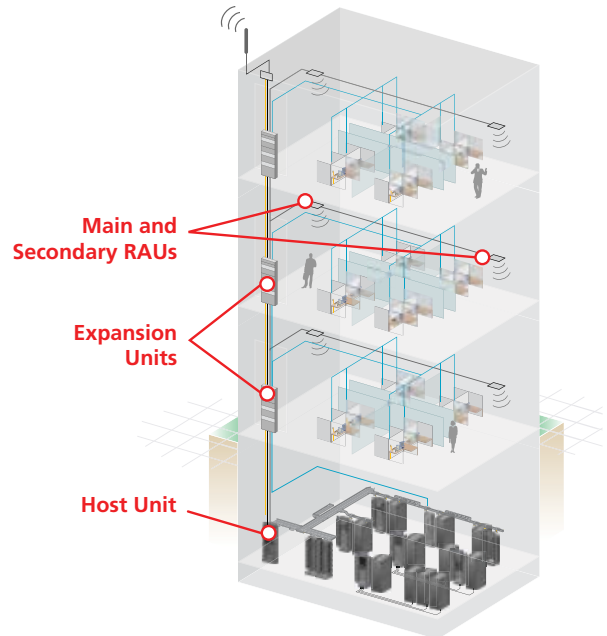

Mobile phones, DAS, and wireless equipment: peaceful coexistence

By deploying DAS solutions, medical facilities can not only eliminate the potential for mobile phone interference with critical medical devices, they can enable enhanced productivity through higher call capacity and quality as well calendaring, e-mail, and other mobile phone-based services that help physicians and staff operate more efficiently.

Mobile phone penetration will likely increase rather than decline over time, and carriers will be moving to 3G and 4G services that will prove tougher to provide consistently inside hospitals and clinics. DAS solutions make it possible for healthcare facilities operators to accommodate mobile phone use while continuing to expand their use of wireless medical devices for greater efficiency.



Website: www.adc.com

From North America, Call Toll Free: 1-800-366-3891 • Outside of North America: +1-952-938-8080

Fax: +1-952-917-3237 • For a listing of ADC's global sales office locations, please refer to our website.

ADC Telecommunications, Inc., P.O. Box 1101, Minneapolis, Minnesota USA 55440-1101

Specifications published here are current as of the date of publication of this document. Because we are continuously improving our products, ADC reserves the right to change specifications without prior notice. At any time, you may verify product specifications by contacting our headquarters office in Minneapolis. ADC Telecommunications, Inc. views its patent portfolio as an important corporate asset and vigorously enforces its patents. Products or features contained herein may be covered by one or more U.S. or foreign patents. An Equal Opportunity Employer

108991AE 11/10 Original © 2010 ADC Telecommunications, Inc. All Rights Reserved